


## Universal 96in Strip Retrofit Installation

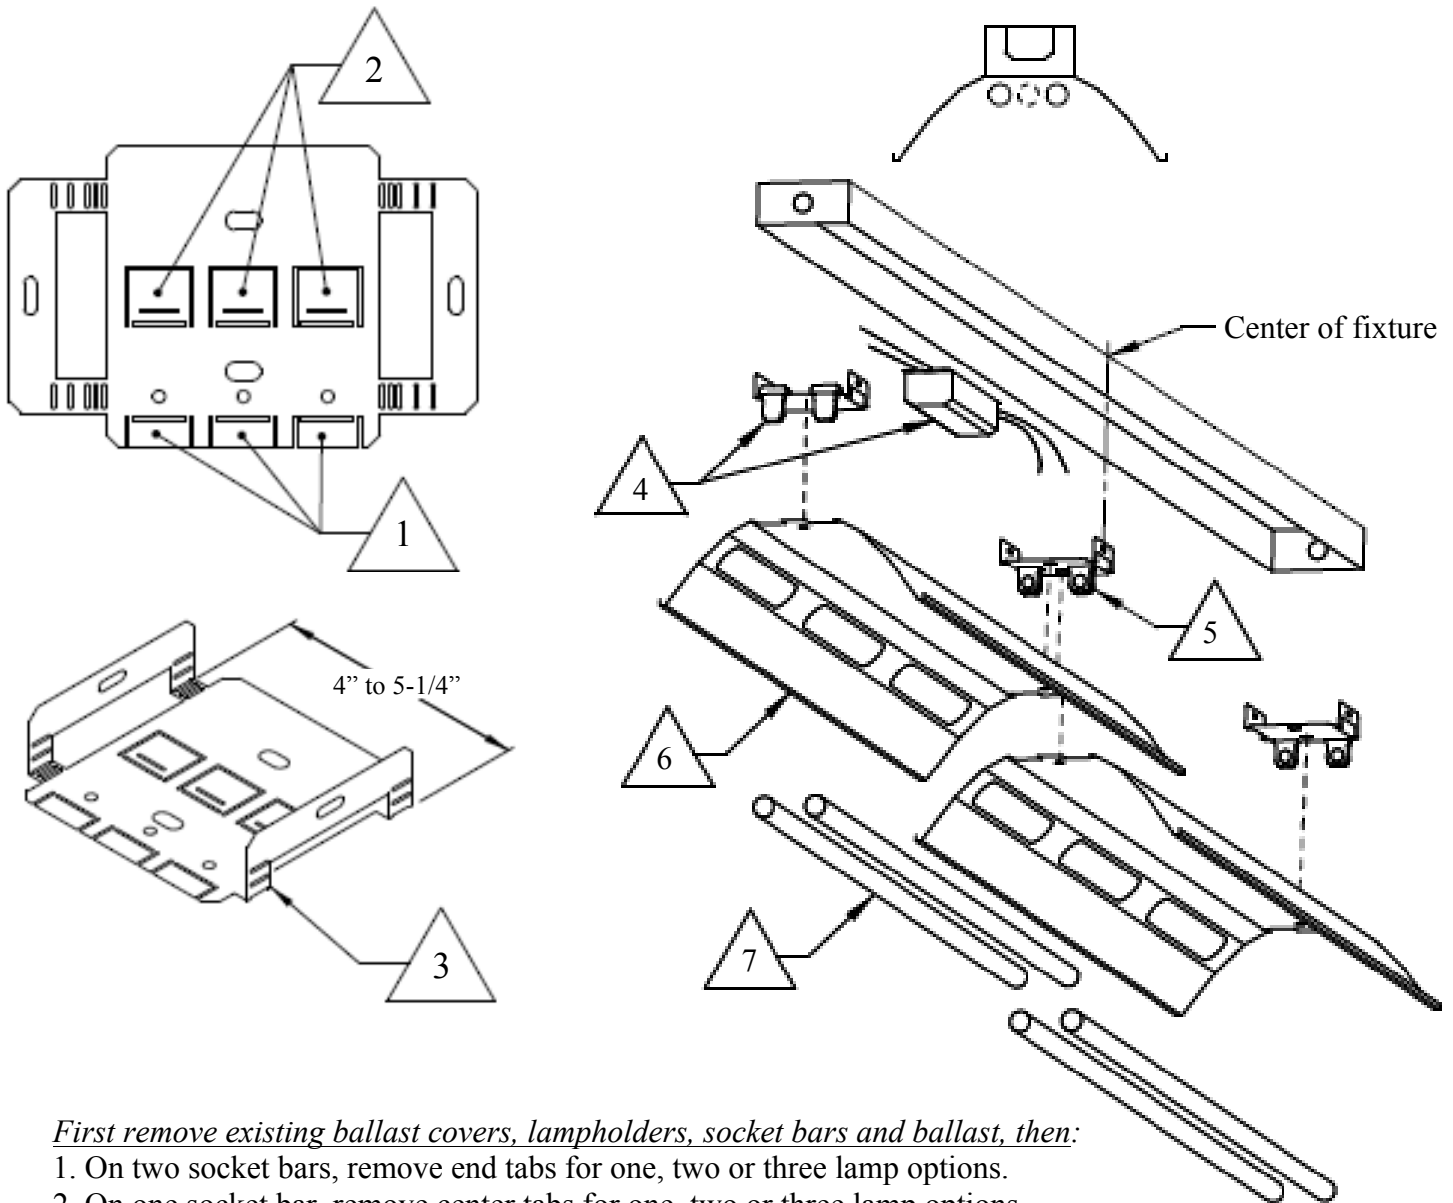

First remove existing ballast covers, lampholders, socket bars and ballast, then:

1. On two socket bars, remove end tabs for one, two or three lamp options.
2. On one socket bar, remove center tabs for one, two or three lamp options
3. Place socket bars centered across fixture to determine which tabs to bend for proper width.  
Bend socket bar side flanges using a straight edged surface.
4. Install end socket bars, lampholders and ballast onto fixture with tek screws provided.
5. Install center socket bar. Center of socket bar should be placed at center of fixture.
6. Install retrofit reflectors with quarter turn fasteners provided.
7. Install new T8 lamps.